


Timber flooring, glued and
screwed to SPEEDFLOOR
joists with 10-10x50 csk
wingtek screws

SPEEDFLOOR boundary floor
joist, fixed to flat side of PFC with
2/M12 bolts @ 600c/c, or as
specified by engineer

SPEEDFLOOR Floor joist,
fixed to boundary joist with
3/10-16x16 hex head screws,
each tab

PFC

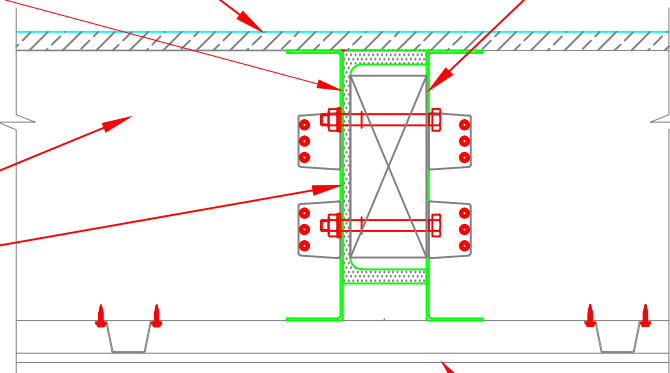

SPEEDFLOOR boundary floor
joist, fixed to open side of PFC
and timber blocking, with 2/M12
bolts @ 600c/c, or as specified by
engineer

SPEEDFLOOR Floor joist,
fixed to boundary joist with
3/10-16x16 hex head screws,
each tab

Plasterboard ceiling,
supported by steel ceiling
battens

MFD 5 -SPEEDFLOOR Joist to PFC Beam

Speedfloor

Mail: P.O.Box5420
Wellesley St
Auckland NZ
PH: +64 9 303 4825
www.speedfloor.co.nz

Standard Details

Title
Speedfloor Joists PFC Beam

Scale
1: 10 @ A4

Rev
A

Sheet

Drawn by
EO

Date
15/09/2015

MFD 5